

FOG LIGHT RELAY

ON-VEHICLE INSPECTION

1. INSPECT FRONT FOG LIGHT RELAY
- (a)

Remove the front fog relay from the No. 6 relay block.
- (b)

Measure the resistance of the relay.

Standard resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

